

Flexiscan Security Motion Sensor, IP66



Description

The LXS2000 is a unique Infrared Motion Sensor that utilizes a carefully integrated circuit to detect infrared energy. The Sensor includes user-friendly function.

- Can identify day and night: The consumer can adjust working state in different ambient light. It can work in the daytime and at night when it is adjusted on the “sun” position (max). It can work in the ambient light less than 3LUX when it is adjusted on the “3” position (min). As for the adjustment pattern, please refer to the testing pattern.
- SENS adjustable: It can be adjusted according to using location. The detection distance of high sensitivity could be 18m max.
- Time-Delay is added continually: When it receives the second induction signals within the first induction, it will restart to time from the moment

Product Features:

- Power Source: 220-240V/AC
- Power Frequency: 50/60Hz
- Time Delay: Min 10 sec ± 3sec; Max 30min ±2min
- Rated Load: Max 2000W,1000W
- Detection Moving Speed: 0.6 – 1.5m/s
- Detection Range: 120°
- Detection Distance: 6-18m(<24°C)(adjustable)
- Ambient Light: <3-2000LUX
- Working Temperature: -20~ + 40°C
- Work Humidity: <93%RH
- Power Consumption: approx 0.5W
- Installation Height: 1.8 - 2.5m

Manual Override Function:

- Sensor mode → Stay on Now switch wall switch OFF-ON, OFF-ON twice within 3seconds. The sensor will now hold your light ON continuously just likes a normal light.
- Stay on → Sensor mode(The following either method is ok)
 - 1) Switch your wall switch OFF, and then switch ON after 0.3seconds.
 - 2) If the light left ON (not change the sensor to sensor mode by hand), it will return to the sensor mode after 8hours.



Lanx Australis is an Australian owned company which manufactures and distributes quality electrical products throughout Australia and New Zealand. we guarantee you will be 100% satisfied with our full range of products.

INSTALLATION ADVICE:

As the detector responds to changes in temperature, avoid the following situations:

- ❑ Avoid pointing the detector towards objects with highly reflective surfaces, such as mirrors etc.
- ❑ Avoid mounting the detector near heat sources, such as heating vents, air conditioning units, light etc.
- ❑ Avoid pointing the detector towards objects that may move in the wind, such as curtains, tall plants etc

Connection


Warning:

Warning. Danger of death through electric shock!

- ❑ Must be installed by professional electrician.
- ❑ Disconnect power source.
- ❑ Cover or shield any adjacent live components.
- ❑ Ensure device cannot be switched on.
- ❑ Check power supply is disconnected.

- ❑ Connect the power wire with the sensor according to the connection-wire diagram.
- ❑ Fix the sensor with inflated screw on the selected position on the wall.
- ❑ Switch on the power and test it

Wire Diagram

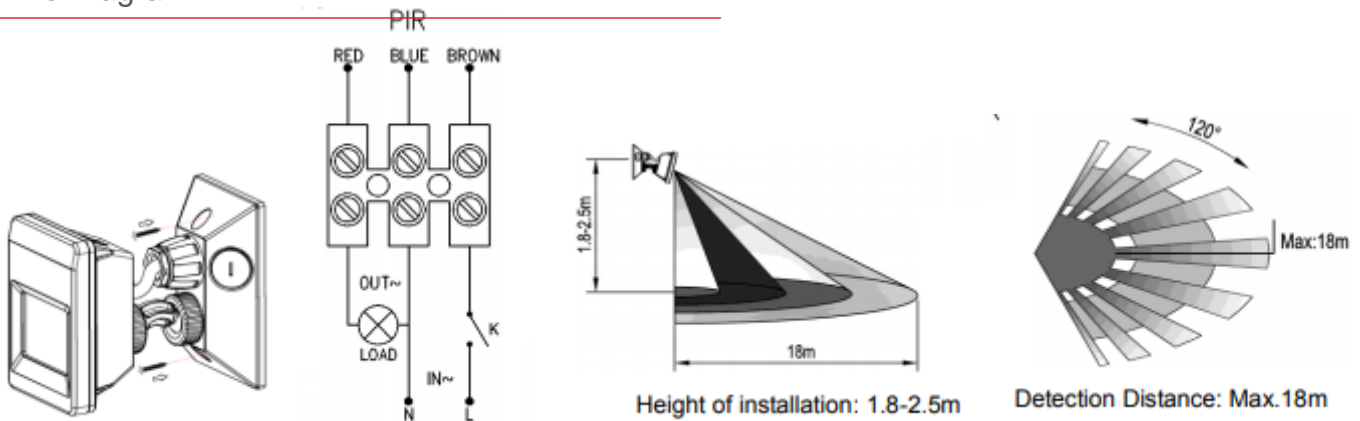

Lanx Australis is an Australian owned company which manufactures and distributes quality electrical products throughout Australia and New Zealand. we guarantee you will be 100% satisfied with our full range of products.

TEST:

- Turn the SENS knob on the maximum (+). Turn the LUX knob to the maximum (sun). Turn the TIME knob to the minimum (10s).
- Switch on the power; the sensor and its connected lamp will have no signal at the beginning. After Warm-up 30sec, the sensor can start work. If the sensor receives the induction signal, the lamp will turn on. While there is no another induction signal any more, the load should stop working within 10sec±3sec and the lamp would turn off.
- Turn LUX knob on the minimum (3). If the ambient light is more than 3LUX, the sensor would not work and the lamp stop working too. If the ambient light is less than 3LUX (darkness), the sensor would work. Under no induction signal condition, the sensor should stop working within 10sec±3sec.

Note: when testing in daylight, please turn LUX knob to ☀ (sun) position, otherwise the sensor could not work

SOME PROBLEM AND SOLVED WAY:

- The load does not work:
 - Please check if the connection of power source and load is correct.
 - Please check if the load is good.
 - Please check if the settings of working light correspond to ambient light.
- The sensitivity is poor:
 - Please check if there is any hindrance in front of the detector to affect it to receive the signals.
 - Please check if the ambient temperature is too high.
 - Please check if the induction signal source is in the detection field.
 - Please check if the installation height corresponds to the height required in the instruction.
 - Please check if the moving orientation is correct.
- The sensor can not shut off the load automatically:
 - Please check if there is continual signal in the detection field.
 - Please check if the time delay is set to the maximum position
 - Please check if the power corresponds to the instruction.



Lanx Australis is an Australian owned company which manufactures and distributes quality electrical products throughout Australia and New Zealand. we guarantee you will be 100% satisfied with our full range of products.